

Roland TR-909	Sync24 out	midi ñîâîâñòèì, îî ñèíððííèçàòöèÿ ïï DINsync áîçîíæíà
Roland TR-707	Sync24 out	
Roland TR-727	Sync24 out	
Korg KPR-77	Clock out Jack 3.5	48ppqn
Korg DDM-110	Clock out Jack 3.5	48ppqn
Korg DDM-220	Clock out Jack 3.5	48ppqn
Oberheim DX	Clock out Jack 3.5	48ppqn
Boss DR-55	Clock out Jack 3.5	48ppqn
Korg Polysix	Clock out Jack 3.5	ñèíððííèçàòöèÿ àðíááæàòíðà, íáíáóíäèà ïîèèòèèàòöèÿ, óèàçúâàèòà ïðè çàèàçà.
Korg Mono/Poly	Clock out Jack 3.5	ñèíððííèçàòöèÿ àðíááæàòíðà
Roland Juno 6	Clock out Jack 3.5	ñèíððííèçàòöèÿ àðíááæàòíðà
Roland Juno 60	Clock out Jack 3.5	ñèíððííèçàòöèÿ àðíááæàòíðà
Roland SH-101	Clock out Jack 3.5	ñèíððííèçàòöèÿ àðíááæàòíðà
Moog Source MK2	DIN Sync	ñèíððííèçàòöèÿ àðíááæàòíðà
Moog Source	Clock out Jack 3.5	ñèíððííèçàòöèÿ àðíááæàòíðà, íáíáóíäèà ïîèèòèèàòöèÿ, óèàçúâàèòà ïðè çàèàçà.

Â èííèèàèò ïñòààèè àóíäèò áéíè ïèòàíèÿ.

[Ìàðàèèè à òíòíàèèèàð](#)